



Samsung Impression Back Speaker Replacement

How to remove & replace the phone's back speaker.

Written By: Ross McKelvie



INTRODUCTION

How to remove & replace the phone's back speaker.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery



- Orient the phone with the screen facing down.
- Using your thumb, slide the back panel away from the camera to expose the battery.

Step 2




- Grip the battery on its sides, opposite the direction of the white arrow.
- Pry the battery up. It will pivot at the end with the white arrow. The battery will now be free.

Step 3 — Back Cover



- Remove the 6 outer screws.
 - The screws should be 3.5 mm in length.
- ⚠ Put the screws in a safe place as they are very small and easy to lose.

Step 4

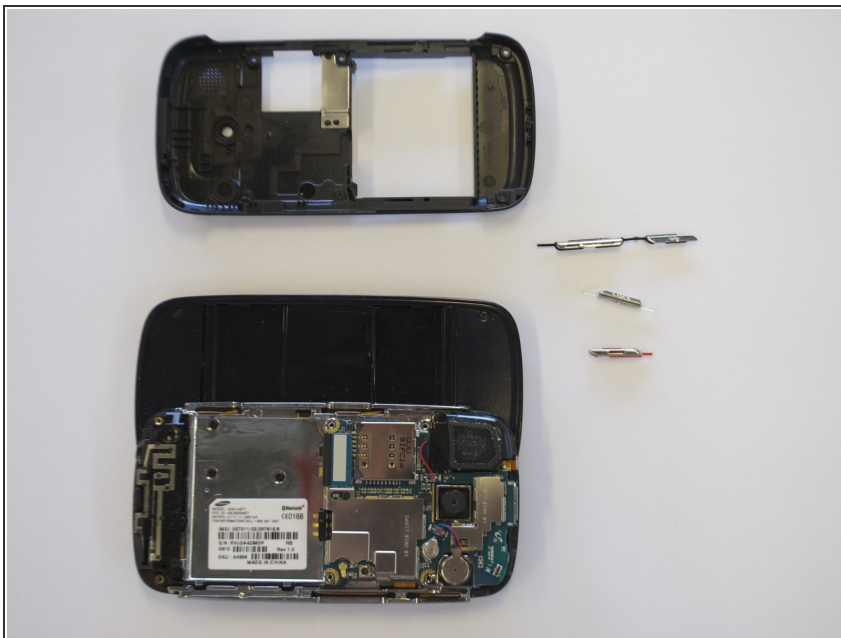

- Snap off back the cover by gently prying around the top and bottom edges with a flat head screwdriver.
- ⓘ It may help to slide the touchscreen upwards when removing the back panel.
- The side buttons will become loose and are prone to fall out, so put these in a safe place.

Step 5 — Back Speaker



- Remove the back speaker by carefully lifting it up.
- The speaker will still be attached to the circuit board by a wire and a small piece of clear plastic.
- Disconnect the speaker by lifting the clear plastic piece at the end of the wire.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-15 06:51:25 AM.